

How to connect HWg-Ares with PDMS

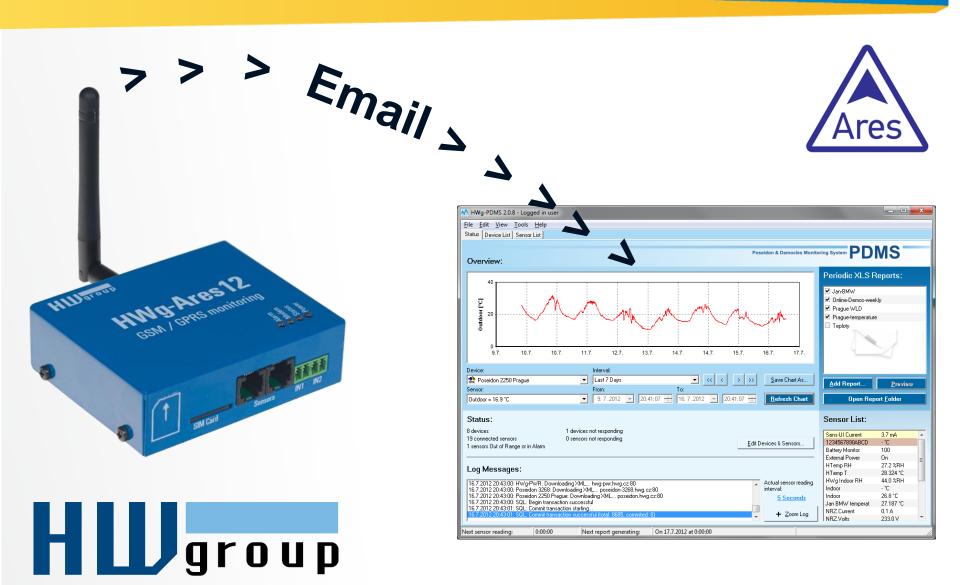

HWg-Ares12 & PDMS (POP3)

HWg-PDMS downloads data from GSM device though email account (GMX.com).

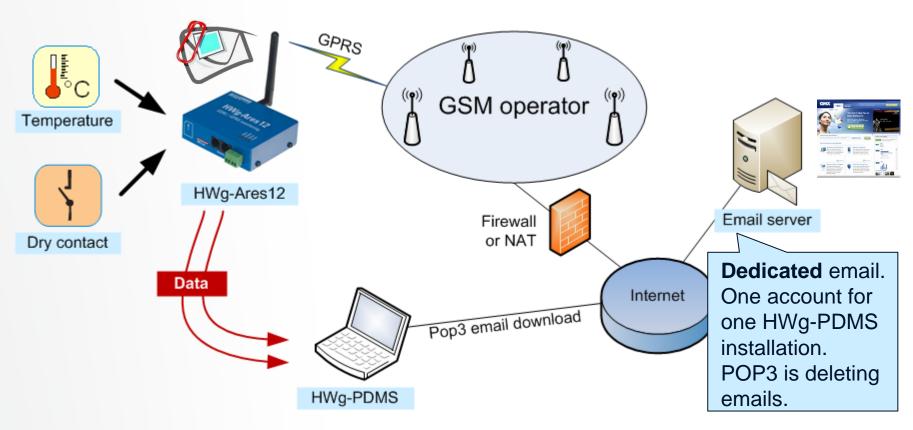

Install PDMS



Install the PDMS 2.x from HWg website


- If you are on the internet, test with online demo device: http://poseidon-2250.hwg.cz
 - Menu > Edit Device & Sensors
 - Add device
 - Open founded device by click to [+]
 - Select by √ one (outdoor) sensor only
 (3 sensors only for free version limit) + Click OK
 - >> You'll see current value on the main screen

Test HWg-Ares & Emails



Try to send **TEST email** from the Ares device to your email.


If you don't have SMTP server, try our testing account on the GMX:

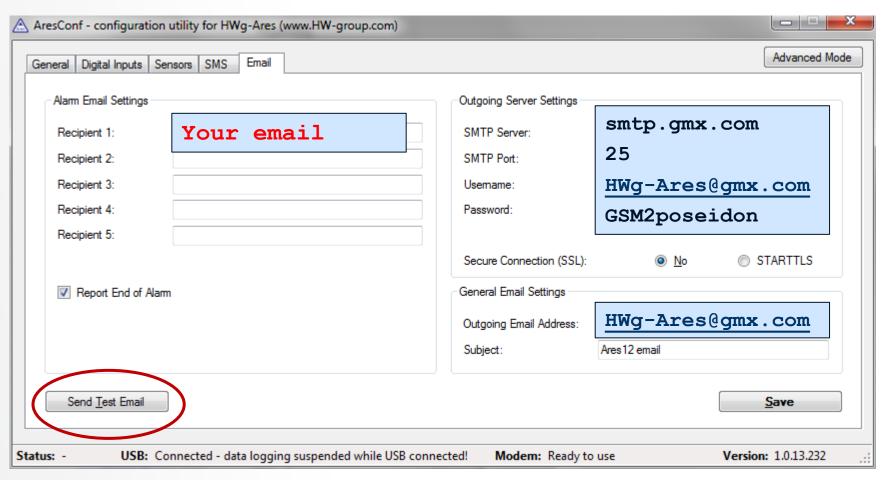

Email Test message



This is message when email sent OK:

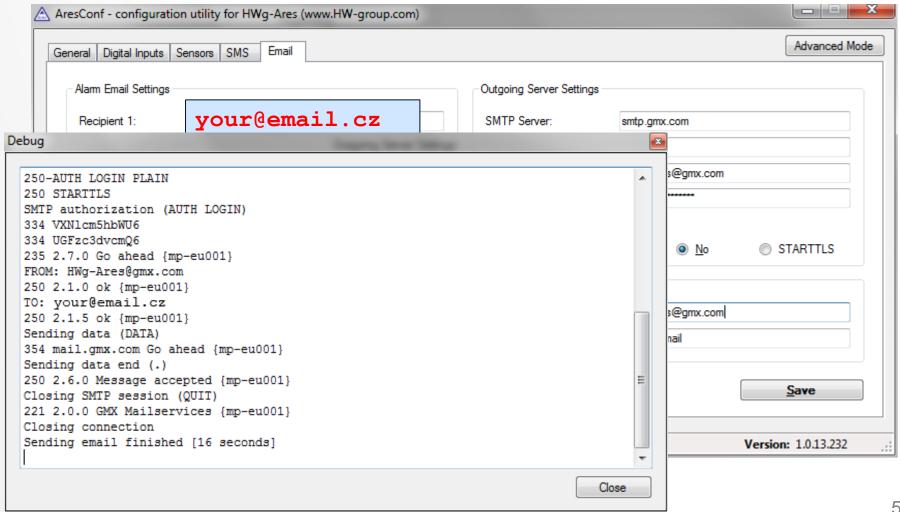


Email potential problems



If you can't send email, check these potential problems:

- Your SIM card has no GPRS data available
- Fill correct APN for your operator (<u>list</u>):

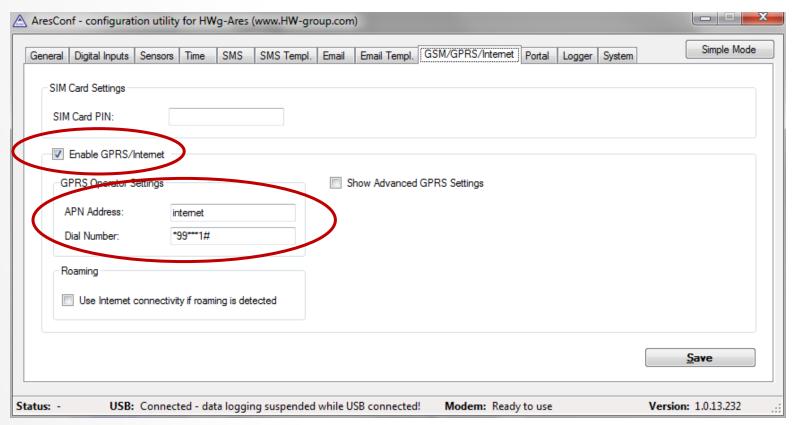

Create PDMS dedicated email



- Create any email mailbox with POP3 for your PDMS.
- It'll be dedicated only for your installation of the PDMS. All devices you want to have in your PDMS will send emails to this one email account.


- Why do I prefer www.gmx.com?
 - Unlimited email storage
 - Wide options for email filtering/forwarding
 - Not require TSL Authorization



Send logfiles to your PDMS email




- Name the Sensor (you'll see this name in all screens)
- Switch AresConf to Advanced mode and setup Logger

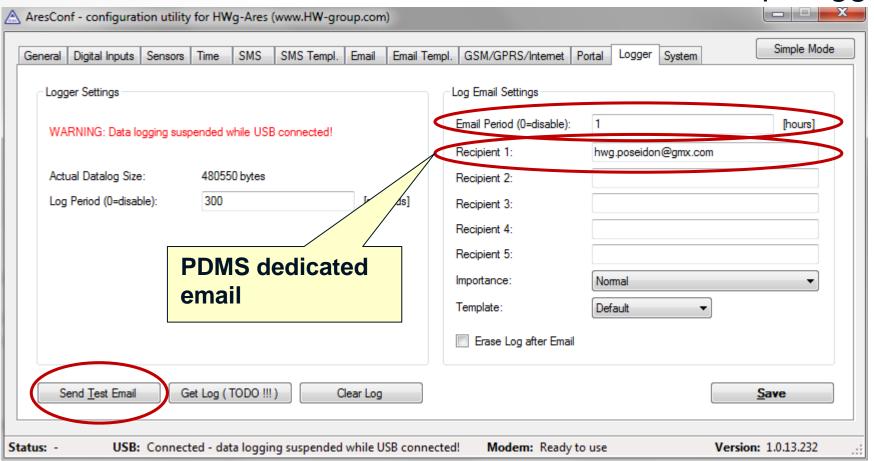

Email verification on the GMX




Check by webmail, if email with log is there. It's sent every full hour so may be you'll have to wait.

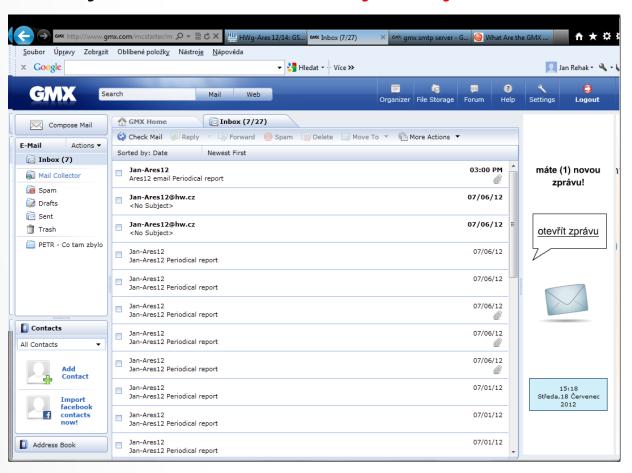


Setup PDMS – POP3 settings



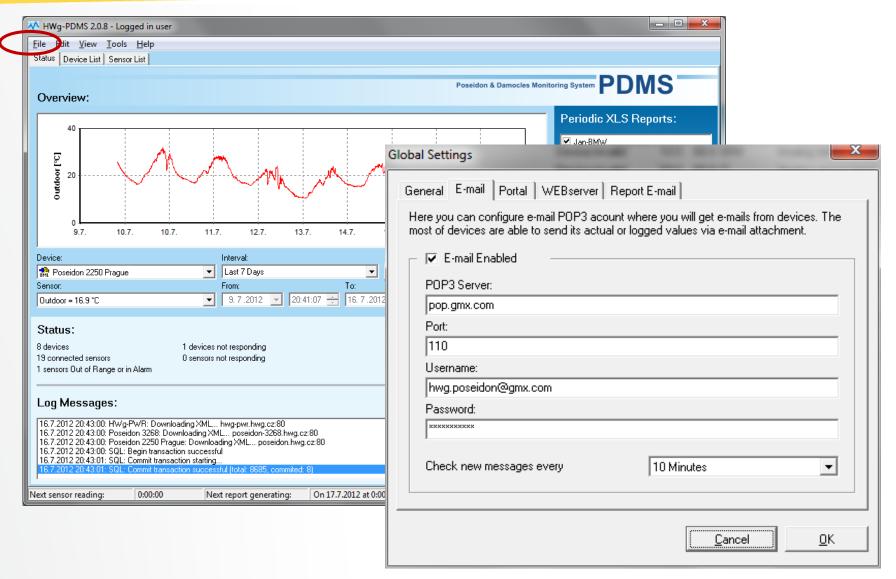


Edit sensors in PDMS 1



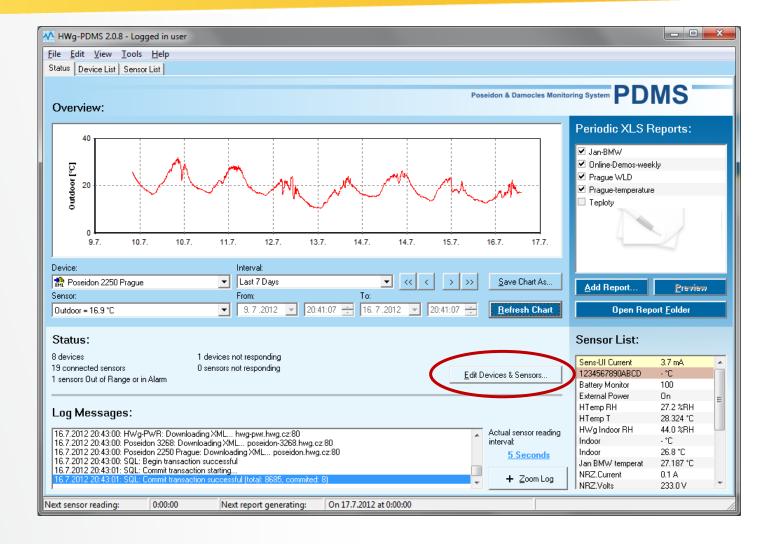


Edit sensors in PDMS 2



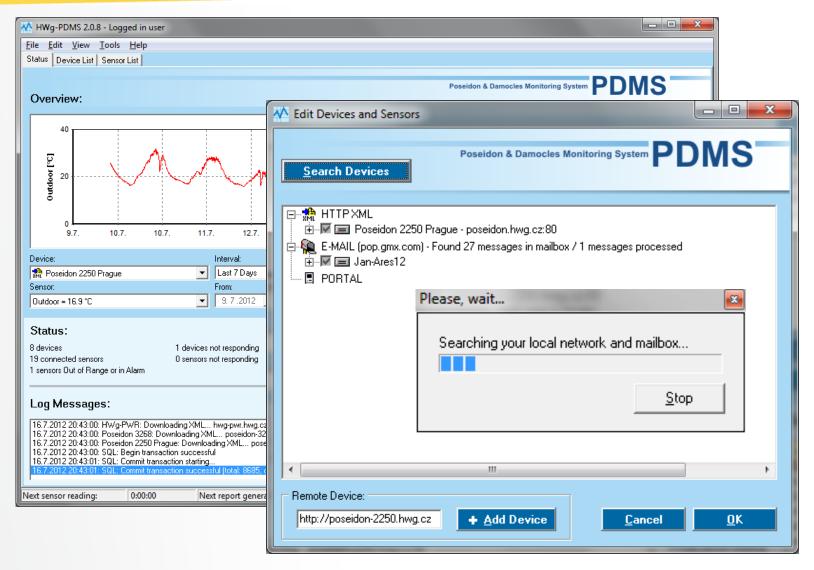

Edit sensors in PDMS 3



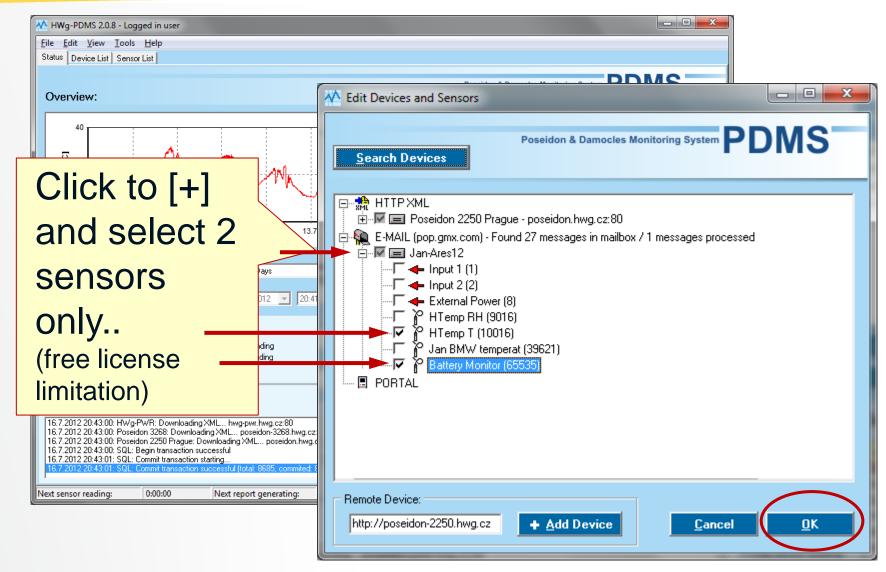

Finished: data are in the PDMS



